



Polycom EagleEye Director II Camera Quick Tips

3725-69436-002B | February 2020

The Polycom EagleEye Director II camera is the next version of the Polycom EagleEye Director camera.

This automatic camera positioning system provides accurate close-up views of the person speaking. The EagleEye Director II camera also provides smooth transitions between the close speaker and the group view.

Indicator Lights

Indicator lights display when the camera powers on. The color and blinking behavior of the lights indicate various system statuses.

Color	Description
Blue	Power on, EagleEye Director II camera is in active state
Blinking Blue	Receive IR, EagleEye Director II camera boot up
Fast-Blinking Blue	Power on, system initialization, adjust analytics camera status
Amber	Standby/Asleep
Alternating Amber and Blue	Software update, factory restore, USB image update
Blinking Amber	USB plugged in
Green	In a call
Blinking Green	Receive IR in a call
Fast-Blinking Green	Camera error

Disable Camera Tracking

Disable camera tracking to stop the camera from automatically tracking the speaker.

- » Press or on the remote control to disable camera tracking.

After you disable camera tracking, you can manually control the camera position using the remote control.

Adjust the Camera

You can adjust Polycom cameras to enhance the view of the meeting participants using the remote control.

Note: Before you adjust the EagleEye Director II camera, you must disable camera tracking.

- » Press , , , , , and on the remote control to pan, tilt, and zoom the left camera.

Enable Camera Tracking

Enable camera tracking to allow the EagleEye Director II camera to automatically focus on the speaker. The camera tracks when a call starts.

You can manually start camera tracking in a call or out of a call.

- 1 Press for five seconds on the remote control.
The LED on the camera flashes blue.

- 2 Press or on the remote control to enable camera tracking.

Tilt Analytics Camera

Tilt the analytics camera to view and track the participants.

- 1 Press for five seconds on the remote control.
The LED on the camera flashes blue.
- 2 Press and on the remote control to tilt the analytics camera.
Do not press any button on the remote control for five seconds or press or to stop tilting the analytics camera.

Set EagleEye Director II Camera as Default Camera on Skype for Business

Set the EagleEye Director II Camera as the default camera for Skype for Business clients on Windows laptops.

- 1 In the Skype for Business client, click > **Video Device**.
- 2 Select **Polycom EagleEye Director II Camera** from the list.
- 3 Click **OK**.