



QUICK START

POLY STUDIO E70 CAMERA
DISPLAY MOUNT

TOOLS

5mm L-Key Hex 4mm L-Key Hex (6) Tie Wrap

CONTENTS

HARDWARE

(2) M4 Flat Washer (4) M8 Flat Washer, 1.6 mm thick (10) M8 Washer, 5mm thick (4) M8 Nut (2) M4 x 10 mm Screw

(2) M4 Lock Washer (2) M6 Lock Washer (2) M8 Lock Washer (2) M6 x 12 mm Screw (2) M6 x 25 mm Screw

HARDWARE

(2) M6 x 50 mm Screw (2) M8 x 15 mm Screw (2) M8 x 25 mm Screw

(2) M8 x 50 mm Screw (2) M8 Stud

1:1 Scale

1

x1

2

(2) M4 Flat Washer
(2) M4 Lock Washer
(2) M4 x 10mm Screw

(4) M8 Flat Washer, 1.6mm thick
(4) M8 Nut
(2) M8 Stud (top of display only)

x2 x2 x2 x4 x4 x2

3

(2) M8 Lock Washer or
(2) M6 Lock Washer

(2) M8 x 50mm Screw or
(2) M8 x 25mm Screw or
(2) M8 x 15mm Screw or
(2) M6 x 50mm Screw or
(2) M6 x 25mm Screw or
(2) M6 x 12mm Screw

(2-10) M8 Washer, 5mm thick

x2 x2 x2 x2 x2 x2 x2 x2 x2 x10

OPTIONAL

Optional assembly with user-supplied display mount

4

A

B

Optional Extension

5

(2) M4 x 16 mm Screw

x2

6

7

Screw to tighten

8

www.poly.com/setup/studio-e70

© 2021 Plantronics, Inc. All rights reserved. Poly, the propeller design, and the Poly logo are trademarks of Plantronics, Inc. All other trademarks are the property of their respective owners. Manufactured by Plantronics, Inc.

Recyclable where facilities exist

1725-87233-001C 09.21