



Polycom® RealPresence® Medialign™ 270 EagleEye™ Director II Camera Bracket

- 1** Attach the EagleEye Director II base to the camera bracket using two M3 thumb screws in the top slot of the bracket and the front feet of the EagleEye Director II base.

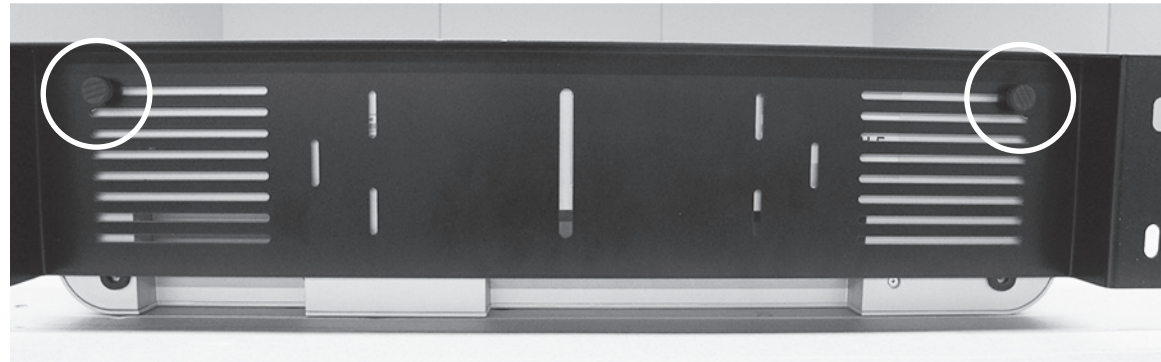

- 2** Refer to the *Polycom EagleEye Director II Setup Sheet* to complete the assembly of the EagleEye Director II camera.

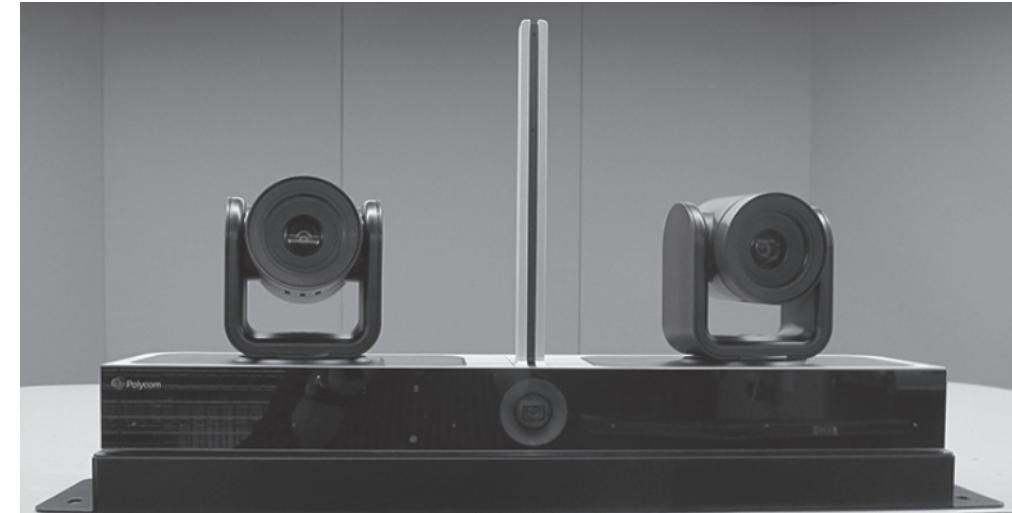

- 3** Refer to the *Polycom RealPresence Medialign 270 Setup Sheet* to attach the EagleEye Director II assembly to the RealPresence Medialign 270 system.

