




# Installing a Polycom® RealPresence® Group 700 System in the Polycom® RealPresence® Group Series Media Center



This supplement describes how to install a Polycom® RealPresence® Group 700 system in the Polycom® RealPresence® Group Series Media Center. Follow the instructions in *Setting Up the Polycom RealPresence Group Series Media Center*, 1725-08510-00X, and use this supplement to replace the steps to install the system.




**19a** Remove the four screws from both sides of the Group 700 system.

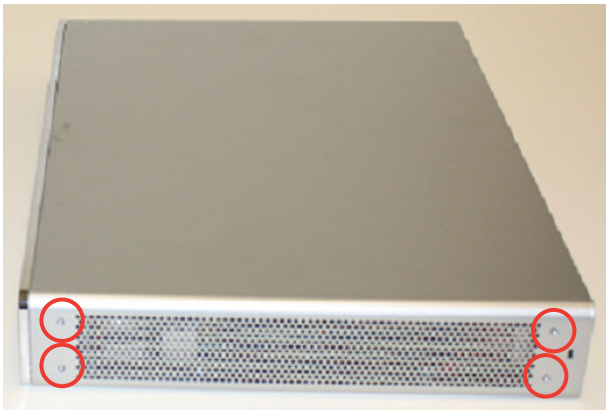

**19b** Position the Group 700 system in the tray.



**19c** Attach the Group 700 system to the tray using three of the four screws, removed in step 19a, on each side of the Group 700 system.

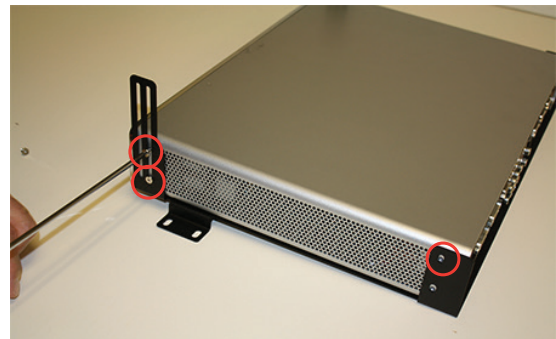

For more information about the components of the RealPresence Group Series Media Center, refer to the documentation at [http://support.polycom.com/PolycomService/support/us/support/video/group\\_series/group\\_packaged\\_solutions.html](http://support.polycom.com/PolycomService/support/us/support/video/group_series/group_packaged_solutions.html).

[www.polycom.com](http://www.polycom.com)

© 2014, Polycom, Inc. All rights reserved. POLYCOM® and the names and marks associated with Polycom's products are trademarks and/or service marks of Polycom, Inc. and are registered and/or common law marks in the United States and various other countries. No portion hereof may be reproduced or transmitted in any form or by any means, for any purpose other than the recipient's personal use, without the express written permission of Polycom.

1725-09099-001/A



19d

Attach the mounting ear to the lower right screw location using the washer and shoulder screw. Repeat on the other side. Note that the design of the mounting ear shown below has changed.



19e

Install four clip-on rack nut fasteners in holes 7 and 9 from the top of the upper set of holes and in holes 2 and 4 from the top of the lower set of holes, on the left vertical support. Repeat with the right vertical support.



19e

Attach the top left and top right mounting tabs temporarily in place using one screw on each side. The lower pivot mounts will fall into position over the appropriate rack clip locations. Secure with two screws on each side.



19f

Remove the two screws temporarily installed at the top. Pivot the codec down to access the I/O and to cable the unit. Refer to *Setting Up the Polycom RealPresence Group 700 System* for cabling details.



19g

After the cables are installed, pivot the Group 700 system to an upright position.



19h

Attach the upper tray ears to the upper rack nut fasteners using two screws on each side.

