

→ ● ● ● → USER GUIDE_



PLANTRONICS
SOUND INNOVATION™

OPTIMIZED FOR
Microsoft®
Office Communicator



PLANTRONICS

SUPRAPLUS® WIDEBAND USB
HW251N-USB

WELCOME

Welcome to the Plantronics family of headset products. Plantronics provides a wide range of products from mission-critical and business-critical applications to personal communications and entertainment. For additional information visit our web site at www.plantronics.com where you can visit our 24/7 support, browse through our knowledge base, chat live or ask a question. We also feature a variety of installation tutorials to make set up quick and easy.

TABLE OF CONTENTS

Register your Product Online	2
Technical Assistance	2
Package Contents	3
Features	3
Powering USB Adapter	4
Wearing the Headset	4
Using the Headset	6
Troubleshooting	7
Warranty	8


REGISTER YOUR PRODUCT ONLINE

Visit www.plantronics.com/productregistration to register your product online so we can provide you with the best possible service and technical support.


TECHNICAL ASSISTANCE

Visit our Web site at www.plantronics.com/support for technical support including frequently asked questions, compatibility and accessibility information. The Plantronics Technical Assistance Center (TAC) is also ready to assist you. Dial [800] 544-4660 ext. 5538

PACKAGE CONTENTS

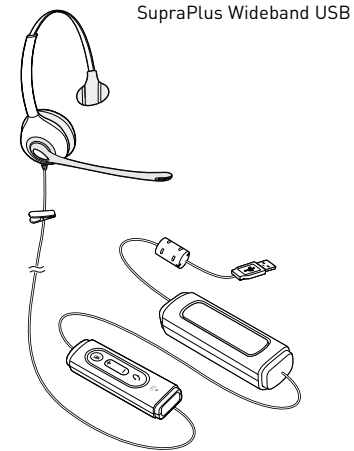


FEATURES

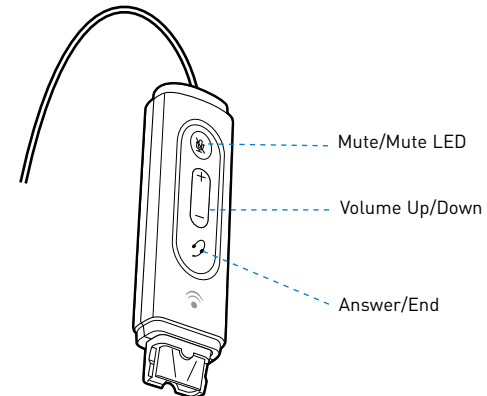

WARNING: Do not use headphones/headsets at high volumes for an extended period of time. Doing so can cause hearing loss. Always listen at moderate levels. See www.plantronics.com/healthandsafety for more information on headsets and hearing.

POWERING


Powering the SupraPlus Wideband USB

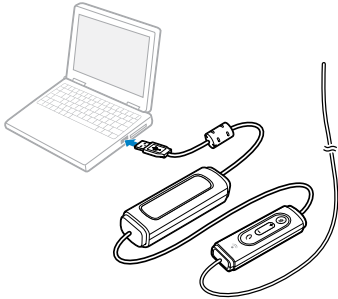

The USB adapter is automatically powered on upon inserting into the USB port of the computer.


No additional software or drivers are required to use this headset with Microsoft Office Communicator.

WEARING THE HEADSET

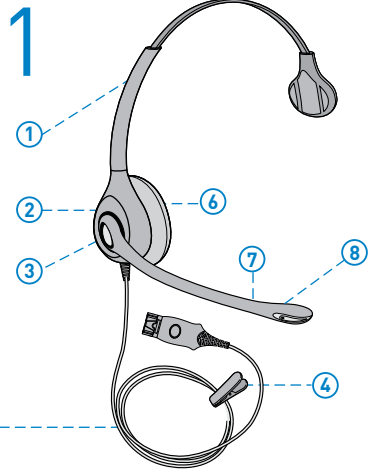

1. Identify the Components

- 1 Adjustable Headband
- 2 Receiver
- 3 Click Stop Turret
- 4 Clothing Clip
- 5 Headset Cord
- 6 Ear Cushion
- 7 Boom
- 8 Noise-Canceling Microphone

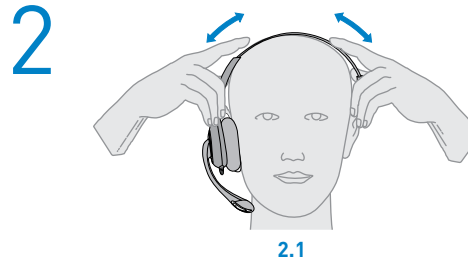


2.1

2. Adjust the Headband

To adjust the headband, lengthen or shorten the band until it fits comfortably. The clickstop feature keeps the headband securely adjusted.

Position the headset receiver so that the foam cushion sit comfortably over the center of your ears.

2.1 Adjust to fit.

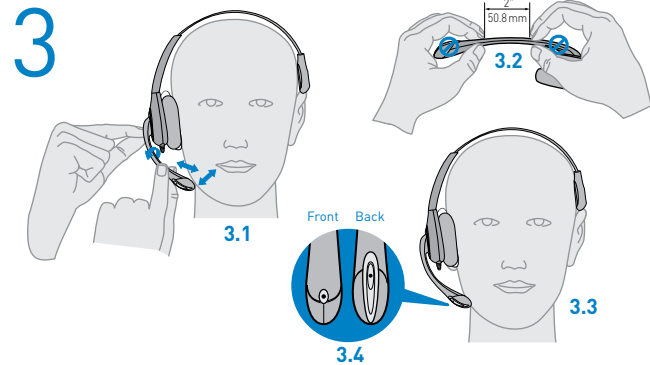

3. Adjust the Mouthpiece

3.1 Hold the receiver securely against your ear with one hand.

With your other hand, adjust the clickstop turret and the microphone so that the tip sits two finger-widths from the corner of your mouth. (To prevent breath noise, avoid putting the microphone in front of your mouth.)

3.2 Carefully bend and shape the boom with both hands as shown. Avoid bending or twisting the boom near the microphone or earpiece.

USING YOUR HEADSET


Answering/ending/making calls with Microsoft Office Communicator

To **make a call**, select the contact you want to talk to or dial the number via Office Communicator.

To **answer or end a call**, simply press the call answer end button.



Adjusting Volume

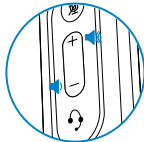

To increase listening volume, press the upper end (+) of the volume button. To decrease listening volume, press the lower end (-).

To adjust the listen or speak volume of the Microsoft Office Communicator, please refer to the softphone user documentation.

To adjust the speak volume of the audio device on the computer, use the Sound and Audio Device section on the Control Panel. It is recommended that the volume is adjusted on the inline control and not the Windows volume control.

Muting a Call



During a call, briefly press the mute button to mute the microphone. When muted, the Mute LED will be lit.

To unmute press the button again.

TROUBLESHOOTING

Problem

Solution

I cannot hear caller.

- The USB adapter is not set as the default audio device. Use the Audio settings in Windows under Sounds and Audio Devices to select "SupraPlus Wideband USB" as the audio device.
- Listening volume is too low. Press the volume up button on the headset.

Callers cannot hear me.

- Headset is muted. Press the mute button on headset to unmute the microphone.
- Headset microphone boom aligned incorrectly. Align the headset boom with your mouth.
- The USB adapter is not set as the default voice device. Use the Voice settings in Windows under Sounds and Voice Devices to select "SupraPlus Wideband USB" as the voice device.

**Sound in headset is distorted.
I can hear echo in headset.**

- Lower the listen volume on your softphone until the distortion disappears.
- Adjust volume on headset.

The other headset I was using to listen to music does not work any more.

- The USB adapter will set itself as the default audio device in Windows. Use the Audio settings in Windows under Sounds and Audio Devices to change the device used for audio.

My headset stops responding to button presses.

- When a PC goes into standby or hibernation, the USB adapter no longer is powered on. Be sure your PC is in an active state.

WARRANTY

LIMITED WARRANTY

- This warranty covers defects in materials and workmanship of products manufactured, sold or certified by Plantronics which were purchased and used in the United States.
- The warranty lasts for two years from the date of purchase of the products.
- This warranty extends to you only if you are the end user with the original purchase receipt.
- We will at our option, repair or replace the products that do not conform to the warranty. We may use functionally equivalent reconditioned/refurbished/remanufactured/pre-owned or new products or parts.
- To obtain service in the U.S., contact Plantronics at (866) 363-BLUE (2583).
- THIS IS PLANTRONICS' COMPLETE WARRANTY FOR THE PRODUCTS.
- This warranty gives you specific legal rights, and you may also have other rights that vary from state to state. Please contact your dealer or our service center for the full details of our limited warranty, including items not covered by this limited warranty.

The Class B digital apparatus complied with Canadian ICES-003

Brazil

Tel: 001-800-544-4660
+1 831 458 7800

Canada

Tel: (800) 540-8363
(514) 956 8363

United Kingdom

Plantronics Ltd
Wootton Bassett, UK
Tel: 0800 410014
+44 (0)1793 842200

Plantronics Ireland

Citywest Business Campus
Dublin 24
Office: +353 (0)1 4693725
Service ROI: 1800 551 896

Germany

Plantronics GmbH
Hürth, Deutschland
Kundenservice:
Deutschland 0800 9323 400
Österreich 0800 242 500
Schweiz 0800 932 340

Danmark

Tel: 8088 4610

Spain

Plantronics Iberia, S.L.
Madrid, España
Tel: 902 41 51 91

Latin America


Tel: 001-800-544-4660
+1 831 458 7500

Finland

Tel: 0800117095

France

Plantronics Sarl
Noisy-le-Grand



Hong Kong

更多信息,請聯絡 當地的經銷商。

Italy

Plantronics Acoustics Italia Srl
Milano, Italia
Numero Verde: 800 950934

Japan

製品関係の質問がありましたら、プラントロニクス
の代理店にお問い合わせ下さい

Korea

추가 정보는 현지 총판 또는 대리점에
받을 수 있습니다.

Sweden

Sverige: 02002 14681

Taiwan

更多信息,請聯絡您當地的經銷商。

Netherlands

Plantronics B.V.
Hoofddorp, Nederland
Tel: (0)0800 Plantronics
0800 7526876 (NL)
00800 75268766 (BE/LUX)

Norway

Norge
Tel: 80011336

Portugal

Tel: 0800 84 45 17

Turkey

Daha fazla bilgi için:
www.plantronics.com

United States

Plantronics Inc
345 Encinal Street
Santa Cruz, CA 95060 USA
Tel: (800) 544 4660



EU & US



www.plantronics.com

© 2007 Plantronics, Inc. All rights reserved. Plantronics, the logo design, DA45, D261N, and SupraPlus are trademarks or registered trademarks of Plantronics, Inc. Windows is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries. All other trademarks are the property of their respective owners. Patents U.S. 5,210,791; 5,259,780; D494,154; and D505,413 and Patents U.S. 5,210,791; D498,470, and D505,413