

# Polycom® RealPresence® Desktop for Mac® OS X

## Contents

What's New in Release 3.10 .....	1
Release History .....	3
Security Updates .....	5
Hardware and Software Requirements .....	6
Install RealPresence Desktop .....	6
Uninstall RealPresence Desktop Using Code Commands .....	9
Products Tested with this Release .....	9
Interoperability Issues .....	10
System Capabilities and Constraints .....	11
Resolved Issues .....	14
Known Issues .....	14
Limitation .....	16
Firewall and NAT Support .....	16
Enterprise Scalable Video Coding (SVC) Mode .....	17
Access Media Statistics .....	18
About AES Encryption .....	20
Preparing Your Device for Mutual Transport Layer Security .....	20
About Section 508 Accessibility Standards .....	24
Get Help .....	25
Copyright and Trademark Information .....	25

## What's New in Release 3.10

Polycom® RealPresence® Desktop 3.10 includes the features and functionality of previous releases and defect fixes.

## ***Collaborating with Polycom Studio and Plantronics Calisto 7200***

From this release, RealPresence Desktop supports using the Polycom Studio USB video bar as speaker, microphone and camera, and the Plantronics Calisto 7200 as speaker and microphone.



When you use the Polycom Studio USB video bar as speaker, microphone, and camera, the mute or unmute status can't sync to the device and the LED indicator doesn't show the corresponding status.

## Release History

This following table lists the release history of RealPresence Desktop.

### Release History

Release	Release Date	Features
3.10	April 2019	Collaborates with Polycom Studio and Plantronics Calisto 7200 Bug fixes
3.9.1	September 2018	As the RealPresence Web Suite soft client, supports NoiseBlock controlled by RealPresence Web Suite RealPresence Desktop changes to 64-bit app on Mac Bug fixes
3.9	January 2018	RealPresence® Web Suite® soft client for non-WebRTC conferencing Install or upgrade RealPresence Desktop as a normal user
3.8.1	December 2017	Support for Polycom® VoxBox™ USB speakerphones Dropped support for automatic detection of Polycom® SmartPairing™ Bug fixes
3.8	September 2017	Support for receiving 1080p people video Support for 1080p content Sign-in domain automatic detection Disable Remember Password feature Automatic Face Brightness Adjustment Dropped support for Polycom® Concierge User interface optimization Blurring Background feature available as a test feature Controlling the meeting using the Touch Bar
3.7	December 2016	Video enhancements UI enhancements New OS support
3.6	June 2016	Free access to Polycom® People+Content™ IP and SmartPairing in standalone mode Audio enhancements Video enhancements
3.5.1	April 2016	Constant Bitrate (CBR) adopted for video codecs Bug fixes and feature enhancements

**Release History**

Release	Release Date	Features
3.5	January 2016	<p>Polycom® Concierge Solution Support            TLSv2 support            MusicMode support            New Devices support            SmartPairing Support for Polycom® RealPresence Debut™ Systems</p>
3.4	June 2015	<p>Profile Photo and Virtual Business Card            Support for Audio Mute Shortcut Keys            Support for Polycom NoiseBlock™            In-call Toolbar User Interface Enhancements            Provision the migration of CMA Desktop to RealPresence Desktop using RealPresence Resource Manager            Mid-string Search of Favorites</p>
3.3	December 2014	<p>User Interface Improvements            Support for Calling SIP Users Directly            Directory Search Enhancements            Instant Messaging Enhancement            Some test features have been moved from the <b>Test Features</b> tab under <b>Settings</b>.</p> <ul style="list-style-type: none"> <li>• The <b>USB Headset Acoustic Fence™</b> feature is now on the <b>Device</b> tab.</li> <li>• The <b>SDP Size Adjustment</b> feature has been moved out. To enable or disable this feature, enter #001# from the Dialpad.</li> </ul> <p>Mac OS X Support Changes            RealPresence Desktop 3.3 adds support for Yosemite 10.10 and drops support for Lion 10.7.</p>
3.2.2	December 2014	<p>Fixed the password security issue (<a href="#">VIDESC-13226</a>).</p>

## Release History

Release	Release Date	Features
3.2.1	July 2014	<p>Support for DTMF with keyboard input. You can enter a DTMF password using your keyboard without showing the DTMF keypad during a call.</p> <p>This feature works only when the RealPresence Desktop DTMF keypad is not shown. When you open the DTMF keypad, you can use only the keypad to enter the password.</p> <p>Fixed an OpenSSL security vulnerability (CVE-2014-0224).</p>
3.2	June 2014	<p>Support for user profile import and export</p> <p>Support for Quality of Service (QoS) in managed mode</p> <p>Support for keyboard noise suppression</p> <p>Support for setting dialing preference</p> <p>Support for the Czech language</p> <p>Directory enhancements as follows:</p> <ul style="list-style-type: none"> <li>• Hide the H.323 and SIP technical terms from the GUI. <ul style="list-style-type: none"> <li>▲ Removes the H.323 and SIP technical protocol indicator from the main window.</li> <li>▲ Removes the H.323 or SIP call type from the device list displayed for contacts or directory search results.</li> </ul> </li> <li>• Support for display device model.</li> <li>• Add the Contacts and Organization buttons under the Contacts tab and support for the Multi-tier directory. <ul style="list-style-type: none"> <li>▲ <b>Contacts</b> Contacts are divided into two groups: <ul style="list-style-type: none"> <li><b>Frequently Used</b> Your frequently used contacts are listed here automatically.</li> <li><b>Favorites</b> Favorites are contacts that you add to the Favorites list. You also can edit a contact or remove a contact from the Favorites list.</li> </ul> </li> <li>▲ <b>Organization</b> See the hierarchy of your organization. This feature is available only in managed mode and if you have permission to view the address on the server.</li> </ul> </li> </ul> <p>Support for the following test features:</p> <ul style="list-style-type: none"> <li>• Polycom Acoustic Fencer™</li> <li>• Automatic SDP Size Adjustment</li> <li>• Automatic Face Brightness Adjustment</li> </ul>

## Security Updates

RealPresence Desktop is now upgraded its OpenSSL to the latest version 1.0.2k for higher security. Please refer to the [Polycom Security Center](#) for information about known and resolved security vulnerabilities.

# Hardware and Software Requirements

The following hardware requirements were determined based on test scenarios. Your system's actual performance may vary based on software or hardware configurations.

## Hardware and Software Requirements

Hardware or Software	Requirement
Mac OS X	Sierra (10.12) High Sierra (10.13) Mojave (10.14)
Processor	<p>RealPresence Desktop system's capabilities vary depending on processor performance. The processor types and speeds listed below are intended as reference. RealPresence Desktop has equivalent capabilities on other processors with equivalent performance. Recommended CPU: Intel Core i5, 2.5 GHz or higher.</p> <p>Basic Video Transmit (up to QVGA 30 fps sending, up to 720p 15 fps receiving)</p> <ul style="list-style-type: none"> <li>• Single core</li> <li>• Dual logical cores, lower than 2.0 GHz</li> <li>• Quad logical cores, lower than 1.3 GHz</li> </ul> <p>Premium Video Transmit (up to VGA 30 fps sending, up to 720p 30 fps receiving)</p> <ul style="list-style-type: none"> <li>• Dual logical cores, 2.0 GHz or higher</li> <li>• Quad logical cores, 1.3 GHz or higher</li> </ul> <p>HD Transmit</p> <ul style="list-style-type: none"> <li>• Dual logical cores, 2.5 GHz or higher (up to 720p 15 fps sending, up to 720p 30 fps receiving)</li> <li>• Quad logical cores, 1.6 GHz or higher (up to 720p 15 fps sending, up to 720p 30 fps receiving)</li> <li>• Quad logical cores, 2.0 GHz or higher (up to 720p 30 fps sending, up to 1080p 30 fps receiving)</li> <li>•</li> </ul>
RAM	4 GB
Video memory	Minimum: 256 MB
Hard drive space	200 MB
Camera	<p>Integrated or external</p> <p>Note: RealPresence Desktop only supports directly connecting with common cameras. RealPresence Desktop doesn't support connecting with video transcoding devices, for example, BlackMagic Web Presenter.</p>

## Install RealPresence Desktop

This section discusses how to install RealPresence Desktop in both standalone and managed mode. In standalone mode, you will need a license number and activation key code or license file to activate the product and use it beyond the 30-day trial period.

## Installation Notes

Here are some things to consider when doing a RealPresence Desktop installation:

- The RealPresence Desktop user interface supports the following languages: English, International Spanish, French, German, Simplified Chinese, Korean, Japanese, Russian, Portuguese, Kazakh, Czech, and Traditional Chinese.
- The Mac OS language setting controls the language choice for RealPresence Desktop.
- You can view the license number of the RealPresence Desktop by clicking Polycom RealPresence Desktop on the top menu and selecting the **About** option.


## Install RealPresence Desktop in Standalone Mode

This section describes how to install RealPresence Desktop in standalone mode.

### To install RealPresence Desktop:

- 1 Download the installation file from [Polycom Support](#).
- 2 Follow the Installer Wizard instructions.

### To activate RealPresence Desktop license:

- 1 Start RealPresence Desktop application and in the **Individual Account** box click **Enter**.
- 2 Click **Activate** to activate the application with a license. Then do one of the following:
  - Click  to select a license file.  
The license file is a .txt file that contains the license number and activation key.
  - Specify your **License Number** and **Activation Key Code** manually.  
You can press the TAB key to navigate among different text fields.  
You can also copy your key string, click in the first text field, and then press Ctrl + V to paste it.
- 3 Click **Activate**.

## Install RealPresence Desktop in Managed Mode

In managed mode, an administrator can distribute the latest version of RealPresence Desktop to all managed systems. To do this, the administrator uploads the RealPresence Desktop distribution package (.tar.gz) to the RealPresence Resource Manager system. This process is described in detail in the **Distribute Polycom Applications** topic in the *Polycom RealPresence Resource Manager Operations Guide*.

The .pkg file is intended for use by experienced Mac administrators to support managed, provisioned, and silent installations.

**About the .pkg file**

- Centralized distribution is used by corporate system administrators for software installation or upgrades.
- When you save the .pkg file to your local disk, do not rename it.
- Silent installation needs administrator level permission.
- The name of the .pkg in your command line should be consistent with the installation package.

**To install RealPresence Desktop using terminal:**

- 1 Navigate to the folder where the RealPresence Desktop .pkg installation file resides.
- 2 Run this command:

```
installer -pkg RealPresenceDesktop.pkg -target CurrentUserHomeDirectory
```

## ***Upgrade RealPresence Desktop through RealPresence Resource Manager***

This section describes how to upgrade RealPresence Desktop when an upgrade package is available on the RealPresence Resource Manager.

The RealPresence Resource Manager can schedule and perform limited monitoring of the RealPresence Desktop application as well as manage and provision the application. The CMA system cannot upgrade the RealPresence Desktop application, and the Polycom RealPresence Resource Manager system can upgrade the application only from version 8.0.


For more information on upgrading managed RealPresence Desktop systems, see the ***Using Dynamic Software Updates Applications*** topic in the *Polycom RealPresence Resource Manager Operations Guide*.

**To upgrade RealPresence Desktop:**

- » Click **Help > Check Upgrade**.

If an upgrade is available, you will be prompted to perform the upgrade.



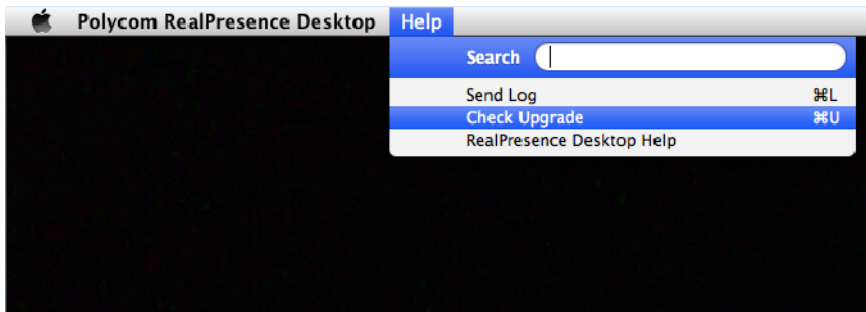

## Uninstall RealPresence Desktop Using Code Commands

This section describes how to uninstall RealPresence Desktop application using code commands.

### To uninstall RealPresence Desktop using Mac terminal:

- » Run this command:

```
rm -rf ~/Applications/Polycom\ RealPresence\ Desktop.app
```

## Products Tested with this Release

The RealPresence Desktop is tested with other products. The following list is not a complete inventory of compatible equipment. It indicates the products that have been tested for compatibility with this release.



Polycom recommends that you upgrade your Polycom devices with the latest software versions, as compatibility issues may already have been addressed by software updates. See the [Current Polycom Interoperability Matrix](#) to match product and software versions.

### Products Tested with this Release

Type	Product	Tested Versions
Gatekeeper, Gateways, External MCU, Bridges, Call Managers	Polycom® Distributed Media Application™ (DMA®) 7000	9.0, 10.0
	Polycom® RealPresence® Resource Manager	10.5, 10.6
	Polycom® RealPresence® Collaboration Server (RMX®) 4000/2000/1800/1500	8.7.5, 8.8.0
	Polycom® RealPresence® Collaboration Server, Virtual Edition	8.7.5, 8.8.0
	Polycom® RealPresence® Web Suite	2.2.2

Type	Product	Tested Versions
Endpoints	Polycom® RealPresence® Group Series	6.2
	Polycom® HDX® Series	3.1.13
	Polycom® RealPresence® Desktop	3.9.1, 3.10
	Polycom® RealPresence® Mobile	3.9.1, 3.10
	Polycom® VVX®	5.9
	Polycom® RealPresence Debut™	1.3.2
	Plantronics Calisto 7200	1.0
	Polycom Studio	1.0
	Polycom Trio™ 8800	5.8
NAT/Firewall/Border Controller	Polycom® RealPresence® Access Director™	4.2.5
	Polycom® VBP® 7301	14.8.6
Third-Party Platforms	Broadsoft SIP Server	R21 SP1
	Broadsoft DMS	R21 SP1

## Interoperability Issues

You may encounter the following issues when using RealPresence Desktop with other products or on specific operating systems.

**Interoperability Limitations Related to the Mac Operating System**

Description	Solution
When the CPU type is single or dual core and the Mac OS version is 10.8, RealPresence Desktop only sends half frame rate of expected per second.	Upgrade to Mac OS 10.9.2 or higher.
On the Mac Air with CPU Intel Core 2 Duo, RealPresence Desktop has performance issues, such as long delays.	This issue is due to CPU limitation. The recommended CPU is Intel Core i5, 2.5 GHz or higher.

**Interoperability Limitations Related to Other Polycom Products**

In a motion mode conference, RealPresence Desktop receives video with a long delay because the video is 60 fps.	Set a conference with sharpness mode on MCU.
If you create a Continuous Presence (CP) only conference call on Polycom RealPresence Collaboration Server (RMX) 4000/2000 system and Polycom RealPresence Collaboration Server 800s version 8.1 with default content settings (Content Settings: HiResGraphics and Content Protocol: H.264 HD), the RealPresence Desktop application cannot send or receive content if call rate is set as 384 kbps or below.	In this case, you need to do the following: <ul style="list-style-type: none"> <li>Change Polycom RealPresence Collaboration Server (RMX) <b>Content Settings</b> to <b>Graphics</b>, and <b>Content Protocol</b> to <b>H.263 &amp; H.264 Auto Selection</b>.</li> <li>Set the call rate on RPM to above 384 kbps.</li> </ul>
RealPresence Desktop supports using only English user names and passwords to sign into the Polycom CMA server and RealPresence Resource Manager, or to register to a gatekeeper or an SIP server.	Use English user names and passwords.
When RealPresence Desktop and m100 are not in the same local network, RealPresence Desktop fails to call m100.	Let m100 call RealPresence Desktop.
When you enable mutual TLS (Transport Layer Security) from RealPresence Resource Manager, RealPresence Desktop will fail to upgrade from RealPresence Resource Manager.	Disable mutual TLS.
When using a USB camera through a USB hub, video may not be displayed.	Direct connect the USB camera to the desktop system.
With NoiseBlock on, when a participant speaks after a long period of silence, the participant's first syllables may not be heard.	None
In some MCU conference templates, the virtual business card is truncated.	None
RealPresence Desktop SIP call transfers by VVX systems may fail when the endpoints are not registered with a Polycom RealPresence DMA system.	Register the endpoints.

## System Capabilities and Constraints

The following protocols, resolutions, algorithms, and ports are supported for RealPresence Desktop.

## Protocols

The following table lists the supported protocols.

Protocol	Description
DNS	Domain Name System
H.235	Security and Encryption
H.239	Token Management
H.281	Far End Camera Control (FECC)
H.323	Signaling
H.460	Firewall/NAT Traversal
LDAP, H.350	Directory Services
NTLMv2	Authentication
Polycom® Lost Packet Recovery™ (LPR™)	Lost Packet Recovery
SIP	Session Initiation Protocol
XMPP	The Extensible Messaging and Presence Protocol

## Resolutions

The following table lists the supported resolutions.

### Resolution and Frame Rate

Resolution and Frame Rate	Source
Up to 720p / 30 fps	Video sent from camera
Up to 1080p / 30 fps	Video received from far end
Up to 1080p / 5 fps	Content showing from the computer
Up to 1080p / 15 fps	Content received from far end

## Algorithms

The following table lists the supported algorithms.

Algorithm Type	Description
Audio	G.711 $\mu$ or G.711A Siren LPR at 24 kbps, 32 kbps, 48 kbps, and 64 kbps G.722.1 at 16 kbps, 24 kbps, and 32 kbps G.722.1 Annex C at 24 kbps, 32 kbps, and 48 kbps G.719 at 32 kbps, 48 kbps, 64 kbps G.729 G.728 SAC Automatic gain control Acoustic echo cancellation
Video	H.261 H.263/H.263+ H.264 AVC H.264 SVC H.264 high profile Content over H.264/H.263/H.263+ Video LPR
Encryption	AES-128 media encryption TLS/SRTP supported in SIP calls

## ***Inbound and Outbound Ports***

The following tables list the supported inbound and outbound ports.

### **Inbound Ports**

Port	Function
1720 (TCP)	H.323 Call Signaling (H.225)
1719 (UDP)	H.323 Registration, Admission, and Status (RAS)
3230 - 3250 (TCP)	H.323 Call Control (H.245)
3230 - 3250 (UDP)	Media (RTP/RTCP)
3238 (UDP and TCP)	BFCP
5060 (UPD and TCP)	SIP

### **Outbound Ports**

Port	Function
443 (TCP)	Provisioning, Monitoring, Help Files, HTTPS
389 (TCP)	LDAP

**Outbound Ports**

Port	Function
5060 (UDP and TCP)	SIP
5061 (TCP)	SIP TLS signaling
5222 (TCP)	XMPP
1720 (TCP)	H.323 Signaling (H.225)
1719 (UDP)	H.323 Registration, Admission, and Status (RAS)
3230 - 3250 (TCP)	H.323 Call Control (H.245)
3230 - 3250 (UDP)	Media (RTP/RTCP)
3238 (UDP and TCP)	BFCP

## Resolved Issues

The following table lists resolved issues in this release.

**Resolved Issues**

Issue ID	Description
EN-117255	You may fail to exit the full-screen mode from RealPresence Desktop version 3.9.1 or 3.9.0 on Mac OS Mojave (10.14).
EN-115293	When you launch RealPresence Desktop, you may still see "Permission to use mic and camera" pops up even though you have set RealPresence Desktop as an allowed application.

## Known Issues

The following table lists all known issues and suggested workarounds for RealPresence Desktop.



These release notes do not provide a complete listing of all known issues that are included in the software. Issues not expected to significantly impact customers with standard voice or video conferencing environments may not be included. In addition, the information in these release notes is provided as-is at the time of release and is subject to change without notice.

**Known Issues**

Issue ID	Description	Workaround
EN-129145	When SMB 2.0 is enabled on both RealPresence Resource Manager and the AD server, RealPresence Desktop may fail to connect to RealPresence Resource Manager if <code>SmbServerNameHardeningLevel</code> is not set to 0 on the AD server.	Set <code>SmbServerNameHardeningLevel</code> to 0.
EN-128548	You may see your screen is turned off when you are in a meeting.	Do one of the following: <ul style="list-style-type: none"> <li>• Move your mouse to turn on your screen.</li> <li>• Extend the screen turn-off time, if it is too short.</li> </ul>
EN-62795	Sometimes RealPresence Desktop for Mac OS X hangs if you use a VMR that does not exist in the RealPresence Web Suite.	None
EN-25768	The RealPresence Desktop pops up certificate trust window even with RootCA certificate installed.	Select to trust the certificate manually.
SWEP-9980	The closed captioning feature is unavailable to audio-only call.	None.
SWEP-9311	During a call, if you switch your audio device to your computer's built-in microphone, the far end cannot hear your audio for approximately 10 seconds after the switch.	None.
SWEP-9197	If you are using Blue®Yeti Pro microphone, plugging out the microphone may cause the RealPresence Desktop application to crash occasionally.	None.
SWEP-8487	After you scale your RealPresence Desktop application screen down to 720p, the quality of the content you send is poor.	None.
SWEP-7938	The local and far-end video doesn't display properly if you choose Logitech® QuickCam® Pro 9000 as your video device.	None. Logitech QuickCam Pro 9000 is incompatible with RealPresence Desktop.
SWEP-7846	When you are in a call with MusicMode enabled, if both sides talk, the audio quality is poor.	This is the designed behavior. Disable MusicMode if you don't want to reproduce the far end music. For example, in distance music learning or concert.

## Limitation

The following table lists the limitation in this release.

Issue ID	Description	Workaround
EN-56996	From version 3.9, RealPresence Desktop is installed in the <code>/Users/username/Applications</code> folder. You can launch the application from the <b>Launchpad</b> .	None.

## Firewall and NAT Support

The Polycom RealPresence Desktop provides firewall and Network Address Translator (NAT) traversal ability without the need to log in to a VPN. The following features are supported:

- Ability to keep Real-time Transport Protocol (RTP) NAT mapping alive during live streaming.
- Support for guest user dialing.
- Ability to support Secure Real-time Transport Protocol (SRTP) and Transport Layer Security (TLS) for the secure transmission of media.
- Ability to support Binary Floor Control Protocol (BFCP) over both TCP and UDP links (UDP preferred). Control signaling can now be forwarded using the best-effort traffic class in firewall and NAT traversal.
- Support for the following dial strings when you place calls without registering to a server.
  - H.323
    - ◆ name@FQDN
    - ◆ name@IP
    - ◆ extension@FQDN
    - ◆ extension@IP
    - ◆ IP##extension
  - SIP
    - ◆ <name>@FQDN
    - ◆ <extension>@<ipAddress:port>
- Ability to verify server certificates by using installed root certificates (SIP, HTTPS, and LDAP) when establishing TLS connections.
- Ability to interoperate with Acme Session Border Controller (SBC) systems and Polycom® RealPresence® Access Director™.
- Support for SIP signaling FW/NAT traversal over TCP/TLS as defined in RFC5626.
- Ability to switch to a backup SIP server when the primary server fails.



## Enterprise Scalable Video Coding (SVC) Mode

The Enterprise Scalable Video Coding (SVC) mode is an alternative to the AVC mode that has traditionally been supported. Differences between the two modes are listed in the following table.

### SVC and AVC Mode

SVC Mode	AVC Mode
Each participant in the conference call is received by the client as a separate video stream.	The composite video image is determined by the bridge based on administrator configuration.
A Caller ID is indicated by text in the appropriate window, which remains on display throughout the call.	Caller ID information is displayed intermittently.
Double-clicking or tapping on a participant's video, content video, or local preview expands that video to full screen. Double-clicking or tapping again reverts the display to the composite image.	Layout may be controlled by dialing ** and then selecting a format. Double-clicking or tapping on the remote video, content video, or local preview expands that video to full screen. Double-clicking or tapping again reverts the display to the composite image.

The SVC mode provides the following features:

- Video sends and receives up to 720p resolution
- Frame rates of 7.5/15/30
- Support for AVC content
- Support for SVC auto layouts for video streams of up to nine far-end participants

Last active speakers, resolution, bandwidth, and number of participants are adjusted based on network bandwidth and processor capabilities.



When using SIP UDP in an SVC call and there is more than 10 percent Packet Loss, the screen layout may display incorrectly. Changing to SIP TLS or TCP is recommended.

- Supported layouts of 1x1 and 1+1 through 1+10  
The maximum layout of 1+10 comprises nine remote participants plus one content sharing frame, and one local preview frame
- Support for SAC with at least two quality layers, for example, 48 kbps and 10 kbps
- Support for mixing up to three different audio streams from the MCU
- Support for combining up to nine different SVC video streams (call rate at 1920 kbps) from the MCUs

SVC conference calls currently do not support the following:


- Far-end Camera Control (FECC)
- Recording with RealPresence Capture Server

- H.323 calls



In a poor network connection, sometimes a participant disconnects automatically from an SVC call. This can result in a frozen video stream of the participant. The RealPresence Collaboration Server (RMX) system will clear the frozen stream in 30 minutes.

## Access Media Statistics

To access media statistics, click the antenna icon  on the in-call toolbar during a call.

Value	Description
Call Type	SIP or H.323 call type.
Call Encryption	Indicates whether your call is encrypted.
Far Site Name	Name of the far site.
Far Site System	Type of video conferencing system at the far end and the software version.
Call Speed	Negotiated speed (bandwidth) for the call, which is usually the combined video and audio speeds in the call.
Video Protocol	ITU-C video algorithm and annexes used in the current call. The video protocol used depends on the capabilities of the system at the far end as well as on your system's configuration.
Video Format	Picture size currently in use.
Audio Protocol	Audio algorithm and annexes used in the current call. The audio protocol used depends on the capabilities of the system at the far end as well as on your system's configuration.
Audio Rate	Bandwidth specified for the audio portion of the call. The proportion of the audio rate to the video rate depends on the protocol used.
Video Rate	Bandwidth specified for the video portion of the call. The proportion of the video rate to the audio rate depends on the protocol used.
Video Rate Used	Actual bandwidth being used for the video portion of the call. This is a real-time measurement, which normally fluctuates.
Video Frame Rate	Rate your system uses to update the picture seen at the far end. The system can send up to 15 frames per second. If the camera picks up large, continuous, or frequent motions, the software takes longer to assemble the data into video frames, and the frame rate drops. Changes in lighting also reduce the frame rate.
Video Packets Loss Percentage	Total video packet loss as a percentage of the total number of video packets transmitted by your system and those transmitted by the far end.
Video Jitter	Percentage of variation in the video transmission rate.
Audio Packet Lost	Number of audio data packets lost during the call, including transmitted packets and incoming packets. Packet loss indicates congestion or other problems on the network.
Audio Packets Loss Percentage	Total audio packet loss as a percentage of the total number of audio packets transmitted by your system and those transmitted by the far end.

---

<b>Value</b>	<b>Description</b>
Audio Jitter	Percentage of variation in the audio transmission rate.
Content Protocol	Format used for the recording, compression, and distribution of the content.
Content Format	Display resolution of the content.
Content Rate	Rate your system uses in content transmission.
Content Rate Used	Actual bandwidth being used for the content transmission.
Content Frame Rate	Rate your system uses in content frame transmission.
Content Packets Lost	Number of content data packets lost during the call, including transmitted packets and incoming packets. Packet loss indicates congestion or other problems on the network.
Content Packets Loss Percentage	Total audio packet loss as a percentage of the total number of content packets transmitted by your system and those transmitted by the far end.

## About AES Encryption

The following are requirements for using AES encryption in calls.

### ***AES Encryption in H.323 Calls***

To use AES encryption in H.323 calls, both you and the far end must satisfy the following requirements:

- Enable AES encryption.

When working in the managed mode, the AES encryption of the RealPresence Desktop application is configurable through its provisioning server.

When working in the standalone mode, the AES encryption of the RealPresence Desktop application works as “When available” and is not guaranteed.

- Both you and your far end must support, or be compatible with, the same Key exchange and encryption method (H.235v3 w, or AES 128bit CBC).

### ***AES Encryption in SIP Calls***

To use AES encryption in SIP calls, both you and the far end must satisfy the following requirements:

- Enable AES encryption
- Enable TLS for SIP transport
- Support for SDES over TLS key exchange
- Support for AES 128 bit CBC mode over SRTP



When working in the managed mode, the AES encryption of the RealPresence Desktop application is configurable through its provisioning server.

When working in the standalone mode, the AES encryption of the RealPresence Desktop application works as “When available” and is not guaranteed.

## Preparing Your Device for Mutual Transport Layer Security

You can establish secure communications using Mutual Transport Layer Security (MTLS) with provisioning servers such as Polycom RealPresence DMA, CMA, or RealPresence Resource Manager systems.

To establish MTLS connections, the client and server need to hold certificates issued from the same Certificate Authority (CA) and the root certificate of this CA.

### ***Generate and Import Your Certificate***

To import certificates, you need to generate a Certificate Request (CSR) first by using a computer that has installed the OpenSSL tool.

## To generate and import your certificate:

- 1 Open the Terminal window from your Mac. (**Applications > Utilities > Terminal.app**)

- 2 Go to the **Documents** folder and generate the private key client.key. For example:

```
localhost$ cd documents
localhost$ openssl genrsa -out client.key 1024
```

- 3 Generate the certificate request client.csr. For example:

```
localhost$ openssl req -new -key client.key -out client.csr
```

The requested information is incorporated into your certificate request. Enter a distinguished name (DN) and other information into the following fields (you can leave some blank).

----

```
Country Name (2 letter code) [GB]:cn ---CSR info.
State or Province Name (full name) [Berkshire]:bj ---CSR info.
Locality Name (eg, city) [Newbury]:bj ---CSR info.
Organization Name (eg, company) [My Company Ltd]:plcm ---CSR info.
Organizational Unit Name (eg, section) []:caqa ---CSR info.
Common Name (eg, your name or your server's hostname) []:caqa ---CSR info.
Email Address []:pp@pp.com ---CSR info.
```

Enter the following “extra” attributes to be sent with your certificate request. Write down the challenge password. You will need it later in the procedure.

```
A challenge password []:1234 -----see the note below.
An optional company name []:poly
```

- 4 Submit the certificate request to your CA:

- a View the content of the file client.csr using the following command:

```
localhost > more client.csr
```

Select and copy its content from BEGIN CERTIFICATE REQUEST to END CERTIFICATE REQUEST.

- b Go to your CA's web interface <http://<CA's IP address>/certsrv/>, and click **Request a certificate**.

- c Choose **Advanced certificate request**.

- d Click **Submit a certificate request by using a base-64-encoded CMC or PKCS #10 file, or Submit a renewal request by using a base-64-encoded PKCS #7 file**.

- e Paste the content of the file client.csr in the **Saved Request** text field, and click **Submit**.

- f Choose **Base 64 encoded** and then click **Download certificate**.

The file is saved as certnew.cer by default in the folder **Downloads**.

- 5 Move the generated *certnew.cer* file to the **Documents** folder.

- 6 Convert the file *ccertnew.cer* to a .p12 file by using the openSSL tool. Note that the export password should be the same as the challenge password you set in Step 4. For example:

```
localhost$ openssl pkcs12 -export -in certnew.cer -inkey client.key -out
client.p12 -name testp12
```

Enter Export Password:


Verifying - Enter Export Password:


- 7 Encrypt the challenge password you set:

- a Go to **Convert String**.
  - b Enter the challenge password in the text field, and click **Base64 Encode!**.
  - c Copy the encoded text from the following text field, and save it as a .pwd file. For example: client.pwd.
- 8 Open the **Documents/Polycom** RealPresence Desktop folder, and then copy the files client.p12 and client.pwd to the folder.

### To import the root certificate of your CA:

- 1 Go to your CA's web address <http://<CA's IP address>/certsrv/>, click **Download a CA certificate, certificate chain, or CRL**.
- 2 Select **Base 64**, and click **Download CA Certificate**.
- 3 Double-click the CA file, and select **Always Trust**. If you see the Add Certificates message, click Add before you click **Always Trust**.

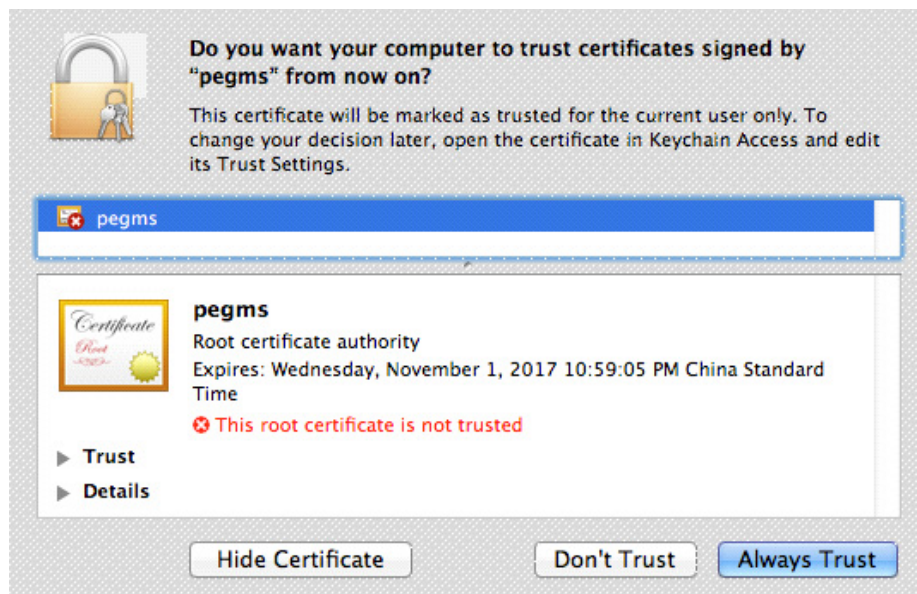

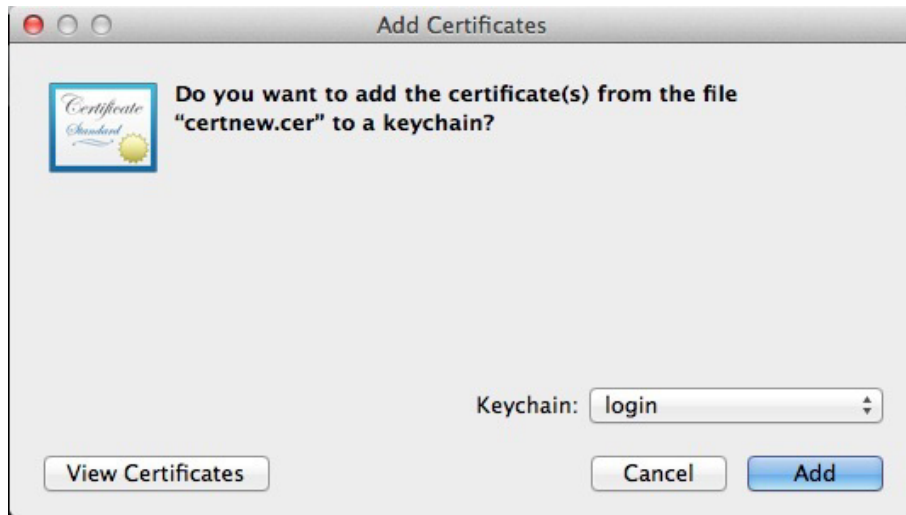

## About Section 508 Accessibility Standards

For information about how RealPresence Desktop conforms to the Section 508 Accessibility Standards, see [Voluntary Product Accessibility Template Reports](#).



## Get Help

For more information about installing, configuring, and administering Polycom products, refer to Documents and Downloads at [Polycom Support](#).

To find all Polycom partner solutions, see [Polycom Global Strategic Partner Solutions](#).

## The Polycom Community

The [Polycom Community](#) gives you access to the latest developer and support information. Participate in discussion forums to share ideas and solve problems with your colleagues. To register with the Polycom Community, create a Polycom online account. When logged in, you can access Polycom support personnel and participate in developer and support forums to find the latest information on hardware, software, and partner solutions topics.

## Copyright and Trademark Information

Copyright© 2019, Polycom, Inc. All rights reserved. No part of this document may be reproduced, translated into another language or format, or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Polycom, Inc.

6001 America Center Drive  
San Jose, CA 95002  
USA

**Trademarks** Polycom®, the Polycom logo and the names and marks associated with Polycom products are trademarks and/or service marks of Polycom, Inc. and are registered and/or common law marks in the United States and various other countries.



All other trademarks are property of their respective owners. No portion hereof may be reproduced or transmitted in any form or by any means, for any purpose other than the recipient's personal use, without the express written permission of Polycom.

**Disclaimer** While Polycom uses reasonable efforts to include accurate and up-to-date information in this document, Polycom makes no warranties or representations as to its accuracy. Polycom assumes no liability or responsibility for any typographical or other errors or omissions in the content of this document.

**Limitation of Liability** Polycom and/or its respective suppliers make no representations about the suitability of the information contained in this document for any purpose. Information is provided "as is" without warranty of any kind and is subject to change without notice. The entire risk arising out of its use remains with the recipient. In no event shall Polycom and/or its respective suppliers be liable for any direct, consequential, incidental, special, punitive or other damages whatsoever (including without limitation, damages for loss of business profits, business interruption, or loss of business information), even if Polycom has been advised of the possibility of such damages.

**End User License Agreement** BY USING THIS PRODUCT, YOU ARE AGREEING TO THE TERMS OF THE END USER LICENSE AGREEMENT (EULA) AT: <http://documents.polycom.com/indexes/licenses>. IF YOU DO NOT AGREE TO THE TERMS OF THE EULA, DO NOT USE THE PRODUCT, AND YOU MAY RETURN IT IN THE ORIGINAL PACKAGING TO THE SELLER FROM WHOM YOU PURCHASED THE PRODUCT.

**Patent Information** The accompanying product may be protected by one or more U.S. and foreign patents and/or pending patent applications held by Polycom, Inc.

**Open Source Software Used in this Product** This product may contain open source software. You may receive the open source software from Polycom up to three (3) years after the distribution date of the applicable product or software at a charge not greater than the cost to Polycom of shipping or distributing the software to you. To receive software information, as well as the open source software code used in this product, contact Polycom by email at [OpenSourceVideo@polycom.com](mailto:OpenSourceVideo@polycom.com).

**Customer Feedback** We are striving to improve our documentation quality and we appreciate your feedback. Email your opinions and comments to [DocumentationFeedback@polycom.com](mailto:DocumentationFeedback@polycom.com).

**Polycom Support** Visit the [Polycom Support Center](#) for End User License Agreements, software downloads, product documents, product licenses, troubleshooting tips, service requests, and more.